

IMPORTANT REMINDER

IF YOUR DISK DRIVE HAS A CARDBOARD HEAD PROTECTOR REMOVE IT ONLY BY PRESSING THE DISKETTE EJECTION BUTTON.

FAILURE TO OBSERVE THIS PROCEDURE WILL CAUSE SERIOUS DAMAGE TO THE DRIVE UNIT.

REINSERT THE HEAD PROTECTOR WHEN TRANSPORTING.

UNITS NOT SUPPLIED WITH A HEAD PROTECTOR DO NOT REQUIRE ITS USE BY DESIGN.